

## Installation Instructions



Roll with 75 -100 pound roller continuously during installation.



Clean excess glue with paint thinner.

For more information:

Please visit

[www.UrbanSurfaces.com](http://www.UrbanSurfaces.com)

&

[www.WfTaylor.com](http://www.WfTaylor.com)



1121 Olympic Dr Corona, CA 92881

Tel: 800.492.URBAN(8722)

Fax: 951.200.5933

[UrbanSurfaces.com](http://UrbanSurfaces.com)

The logo for Urban Surfaces, featuring the word "URBAN" in large, bold, black letters with a yellow outline, and "SURFACES" in smaller, black letters below it. The logo is set against a black background with a white diagonal line.

## Gluedown Quick Installation Guide

Updated October 2015

### Inspection

Urban Surfaces does not warranty Visual defects after installation.

Check materials for correct color, design and size.

Ensure correct quantity is available to finish the job.

### Climate

Acclimate the adhesive & flooring between 65° F - 85° F.

Keep room temperature consistent for 48 hours after installation.



## Substrate Requirements

**Clean:** Remove dust and debris

**Dry:** 90% RH 8lbs. CaCl<sub>2</sub> Test

**Flat Surface:** Fill cracks if uneven prior to troweling adhesive.

### Acceptable substrates:

Underlayment grade plywood

Concrete


Existing well bonded resilient or VCT

## Recommended Trowel

POROUS SUBSTRATE



## Installation Instructions

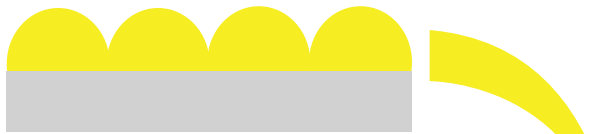


1. Apply adhesive with proper trowel.

2. Allow open time to be approximately 30-60 minutes. Maximum 2 hours.



3. Adhesive will turn from yellow to tan.

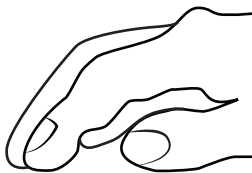

Adhesive will be "tacky" to the touch...



...but will not transfer to finger.



**Install LVT into adhesive**

### \*Recommended Installation Pattern

